

PVC Flooring Resilient Residential: Maintenance Instructions

INITIAL CLEANING

It is always recommended to proceed to a thorough cleaning before using your new flooring.

Residual adhesive should be removed with methylated spirits and a clean cloth.

Lightly soiled floors: vacuum, sweep or damp mop the area to remove loose dirt and building dust.

For semi-professional sites and use, a combined machine is very effective for large areas (combined scrubber/dryer with cylindrical brushes for safety flooring).

MAINTENANCE AND CARE

- Clean the floorcovering regularly, as this is more cost-effective and hygienic than occasional heavy-duty cleaning.
- Always follow dosage instructions carefully.
- Wipe up any grease and spilt oil immediately, as they may damage the surface.
- Resilient floors are damaged by solvents and abrasive powders.
- All chair and table legs should have good quality protective pads (felt or plastic).
- Remember that light colours need more frequent cleaning.
- Use entrance matt
- Daily and regular cleaning:
 - Dry mop or vacuum the floor to eliminate dust and dry soiling
 - Damp mop with diluted neutral detergent to eliminate soiling when needed
 - Treat stains immediately, spot clean by hand with a nylon pad and neutral detergent, work from the outside of the mark towards its centre. Rinse and wipe afterwards with clean water.